

# ULTRA SONIC SEAL

## Joint Designs for Ultrasonic Welding

Perhaps the most critical facet of ultrasonic welding is joint design (the configuration of two mating surfaces). It should be considered when the parts to be welded are still in the design stage, and incorporated into the molded parts. There are a variety of joint designs, each with specific features and advantages. Their selection is determined by such factors as type of plastic, part geometry, weld requirements, machining and molding capabilities, and cosmetic appearance.

### Butt Joint with Energy Director

The butt joint with energy director is the most common joint design used in ultrasonic welding, and the easiest to mold into a part. The main feature of this joint is a small 90° or 60° triangular shaped ridge molded into one of the mating surfaces. This energy director limits initial contact to a very small area, and focuses the ultrasonic energy at the apex of the triangle. During the welding cycle, the concentrated ultrasonic energy causes the ridge to melt and the plastic to flow throughout the joint area, bonding the parts together.

For easy-to-weld resins (amorphous polymers such as ABS, SAN, acrylic and polystyrene) the size of the energy director is dependent on the area to be joined. Practical considerations suggest a minimum height between .008 and .025 inch (.2 and .6 mm).

Crystalline polymers, such as nylon, thermoplastic polyesters, acetal, polyethylene, polypropylene, and polyphenylene sulfide, as well as high melt temperature amorphous resins, such as polycarbonate and polysulfones are more difficult to weld. For these resins, energy directors with a minimum height between .015 and .020 inch (.4 and .5 mm) with a 60° included angle are generally recommended.

The 90° included angle energy director height should be at least 10% of the joint width, and the width of the energy director should be at least 20% of the joint width. Figure 1 shows a butt joint with a 90° included angle energy director. With thick-walled joints, two or more energy directors should be used, and the sum of their heights should equal 10% of the joint width.

To achieve hermetic seals when welding polycarbonate components, it is recommended that a 60° included angle energy director should be designed into the part. The energy director width should be 25% to 30% of the wall thickness. Figure 2 shows a butt joint with a 60° included angle energy director. Figure 3 shows how the parts should be dimensioned to allow for the flow of molten material from the energy director throughout the joint area.

With assemblies whose components are made of identical thermoplastics, the energy director can be designed into either half of the assembly. However, when designing energy directors into assemblies consisting of a part made of copolymers or terpolymers, such as ABS, and another part made of a homopolymer such as acrylic, the energy director should always be incorporated into the homopolymer half of the assembly.

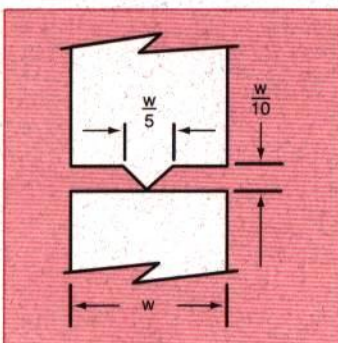


FIG. 1

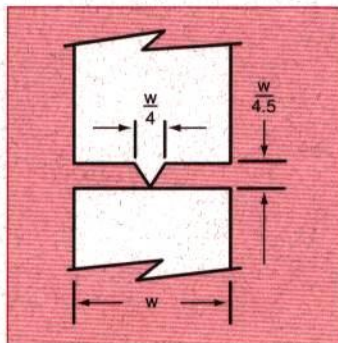


FIG. 2


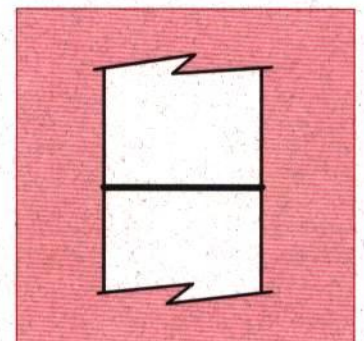


FIG. 3


## Step Joint with Energy Director

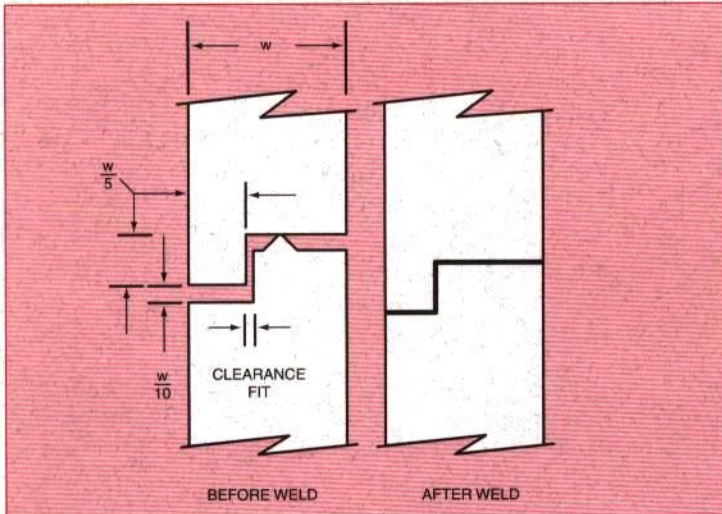

**FIG. 4 STEP JOINT WITH 90° ENERGY DIRECTOR**

The step joint with energy director is illustrated in Figure 4. This joint molds readily, and provides a strong, well aligned joint with a minimum of effort. This joint is usually stronger than a butt joint due to the fact that material flows into the vertical clearance. The step joint provides good strength in shear as well as tension, and is often recommended where good cosmetic appearance is required. When working with crystalline materials a 60° included angle energy director should be used instead of the 90° included angle energy director.


## Tongue and Groove Joint with Energy Director

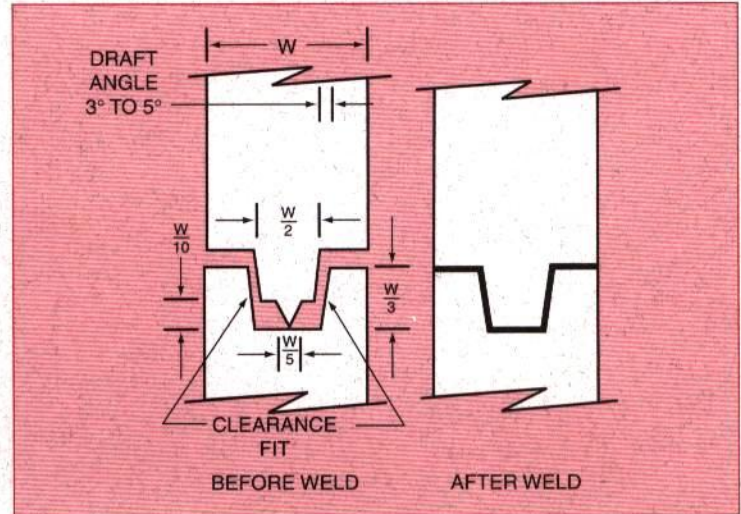

**FIG. 6 TONGUE AND GROOVE JOINT WITH ENERGY DIRECTOR**

Figure 5 shows variations of the basic step joint design.


The tongue and groove joint with energy director is illustrated in Figure 6. This joint is used primarily for scan welding, self location of parts, and prevention of flash both internally and externally. It provides the greatest bond strength of the three joints discussed so far.

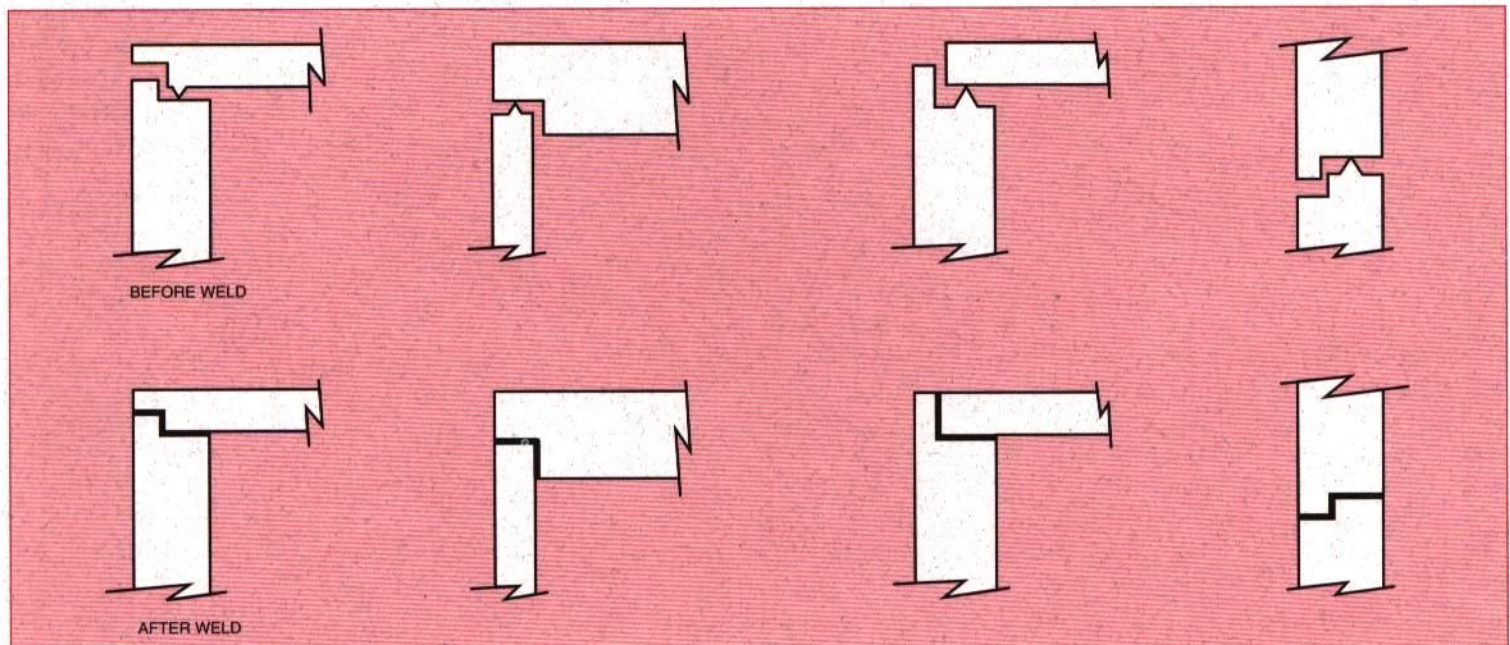

**FIG. 5 STEP JOINT VARIATIONS**

**NOTE**  
Joints with energy directors are not recommended for use with crystalline materials when high strength or hermetic seals are required. When these criteria must be incorporated in crystalline assemblies, the shear joint described on the next page should be considered.

## Shear Joint

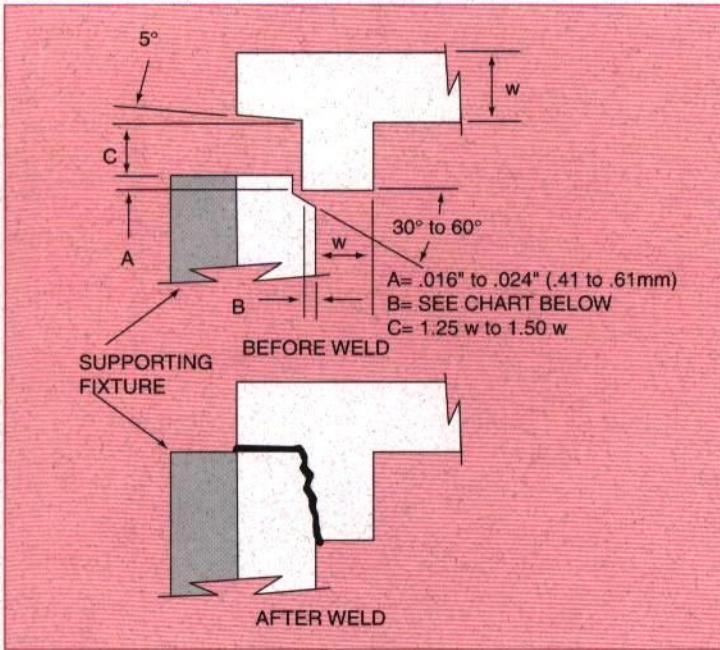

**FIG. 7 SHEAR JOINT**

The shear joint or interference joint shown in Figure 7 is generally recommended for high-strength hermetic seals on parts with square corners or rectangular designs, especially with crystalline resins.


Initial contact is limited to a small area which is usually a recess or step in either of the parts. The contacting surfaces melt first. As the parts telescope together, they continue to melt along the vertical walls. The smearing action of these two melt surfaces eliminates leaks and voids, making this the best joint for strong hermetic seals.

Several important aspects of the shear joint should be considered: 1) the top part should be as shallow as possible, 2) the outer walls should be well supported by a holding fixture, 3) the design should allow for a clearance fit, and 4) a lead-in (A) should be incorporated.


Maximum Part Dimension	Interference (B)
Less than 0.75" (19 mm)	0.008" to 0.012" (0.2 to 0.3 mm)
.075" to 1.50" (19 to 38 mm)	0.012" to 0.016" (0.3 to 0.4 mm)
Greater than 1.50" (38 mm)	0.016" to 0.020" (0.4 to 0.5 mm)

The shear joint requires weld times in the range of 3-4 times that of other joint designs because larger amounts of resin are being welded. In addition, a certain amount of flash will be visible on the surface after welding.

When flash cannot be tolerated for aesthetic or functional reasons, a well similar to the ones shown in Figure 8 should be incorporated.

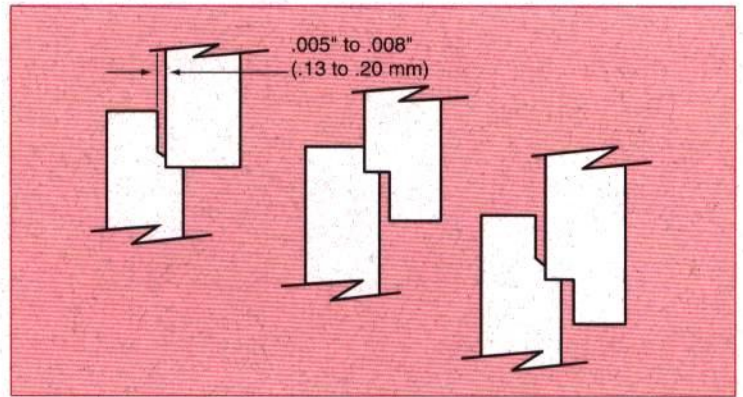


**FIG. 8 SHEAR JOINTS WITH FLASH WELLS**

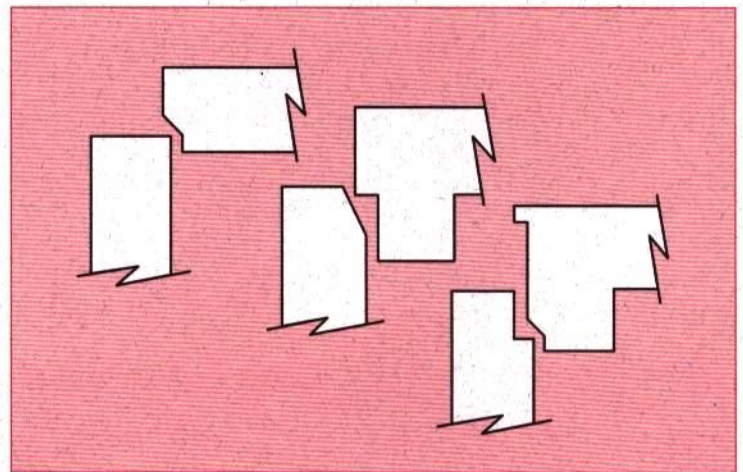


**FIG. 9 SHEAR JOINT VARIATION**

Modified joints, such as those shown in Figure 10, should be considered for large parts or for parts where the top piece is deep and flexible.

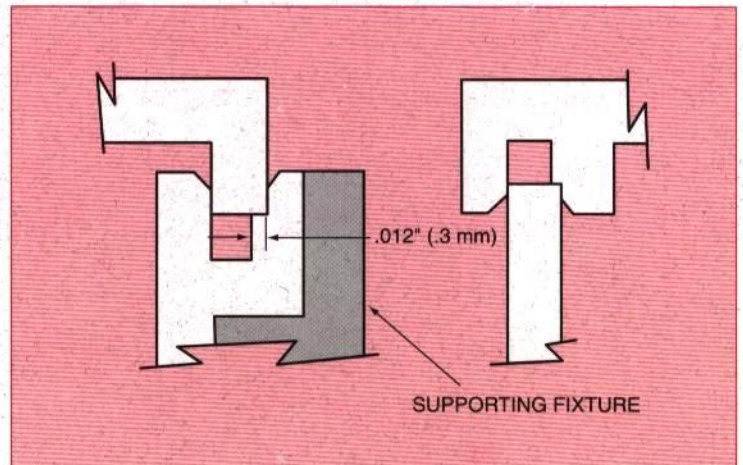

**FIG. 10 SHEAR JOINT VARIATIONS FOR LARGE PARTS**

# Scarf Joint

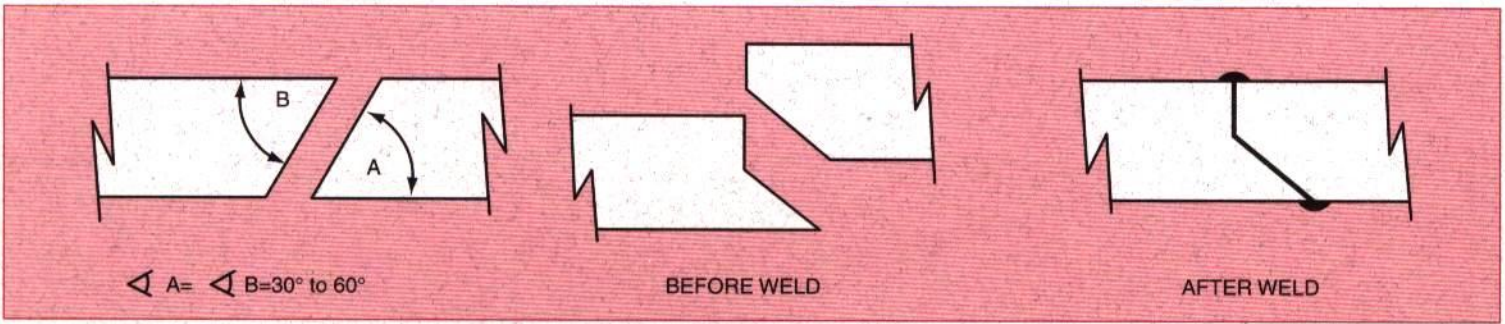

**FIG. 11 SCARF JOINT**

The scarf joint, illustrated in Figure 11, is generally recommended for high-strength hermetic seals on parts with circular or oval designs, especially with crystalline resins.


The scarf joint requires that the angles of the two parts be between  $30^\circ$  and  $60^\circ$  and be within one and one half degrees. If the wall thickness is  $.025''$  (0.63 mm) or less, an angle of  $60^\circ$  should be used. If the wall thickness is  $.060''$  (1.52 mm) or more, an angle of  $30^\circ$  should be used. Intermediate angles are recommended for wall thickness between  $.025''$  and  $.060''$  (.063 and 1.52 mm).

A minimum wall thickness of  $.030''$  (0.76 mm) at the outer edge of the scarf is recommended to prevent "blowout," or melting clear through the wall, during welding.


The scarf joint is not commonly used due to the difficulties encountered in maintaining component concentricity and dimensional tolerances. However, this joint is highly recommended when limited wall thicknesses preclude the use of a shear or modified shear joint.

A modified scarf joint is illustrated in Figure 12.

As shown in Figure 13, a flash well can be incorporated in the scarf joint to contain the excess molten material generated when the parts are welded. The length of the well should be at least equal to the cross sectional thickness of the part being welded.

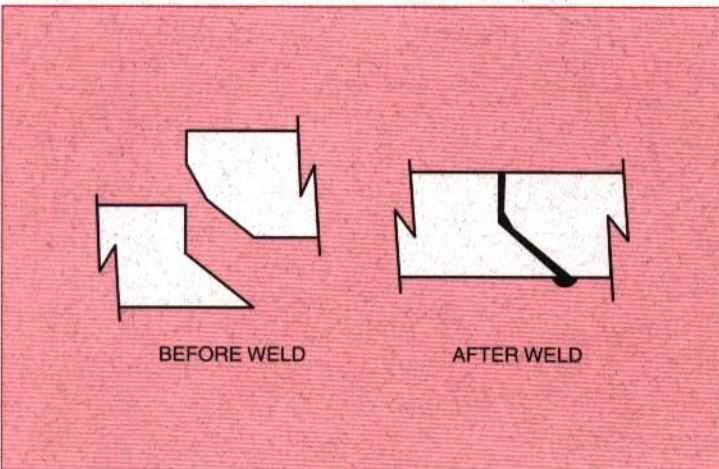

**FIG. 12 MODIFIED SCARF JOINT**

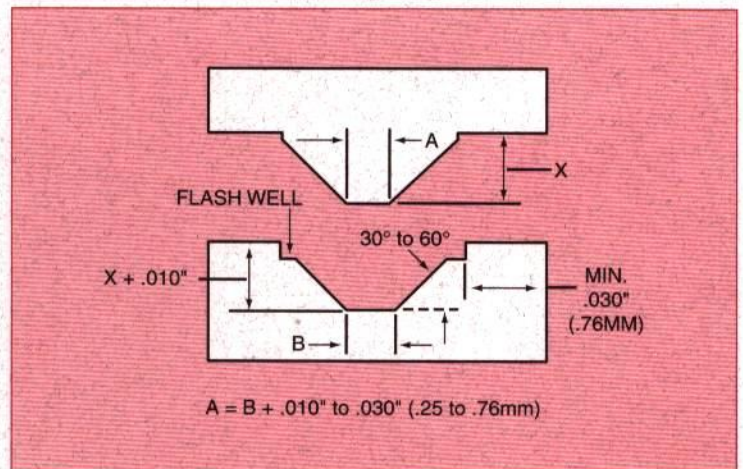

**FIG. 13 SCARF JOINT WITH FLASH WELL**

Ultra Sonic Seal has designed and manufactured thermoplastic assembly equipment and systems since 1959. Sales, services and technical support are available worldwide. Contact our headquarters, or your Ultra Sonic Seal representative.

# ULTRA SONIC SEAL

200 Ultrasonic Welding • Vibration Welding • Spin Welding • Hot Plate Welding  
 Turner Industrial Way • Aston, PA 19014 USA • Tel: 610-497-5150 • Fax: 610-497-5195  
 Internet: [www.ultrasonicseal.com](http://www.ultrasonicseal.com) • E-mail: [info@ultrasonicseal.com](mailto:info@ultrasonicseal.com)